

DE Montageanleitung

FR Instructions d'installation

IT Istruzioni per il montaggio

EN Assembly Instructions

Edelstahl-Handwagen H2

REX 15 / REC 15 / REB 15 / REA 15


i Handwagen kann gesetzliche Sprühgeräte Zulassung verändern
 Chariot à main peut modifier l'autorisation légale des pulvérisateurs
 Il carrello a mano può modificare l'autorizzazione legale delle irroratrici
 Hand cart can change legal spraying equipment approval



REX 15

REC 15 / REB 15 / REA 15


Inhalt Contenu Contenuto Content

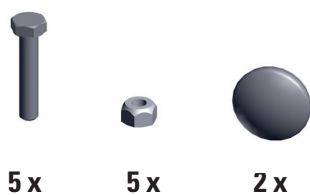

5 x

5 x

2 x

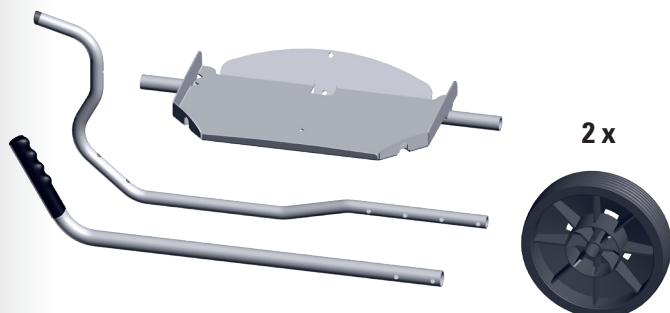

2 x

Benötigtes Werkzeug Required tool Outil requis Strumento richiesto




2 x


Gummi-Hammer / Schraubenschlüssel SW 10
 Rubber Hammer / Wrench SW 10
 Marteau en caoutchouc / Clé SW 10
 Martello in gomma / Chiave SW 10

1

Montage
Assembly
Assemblée
Montaggio

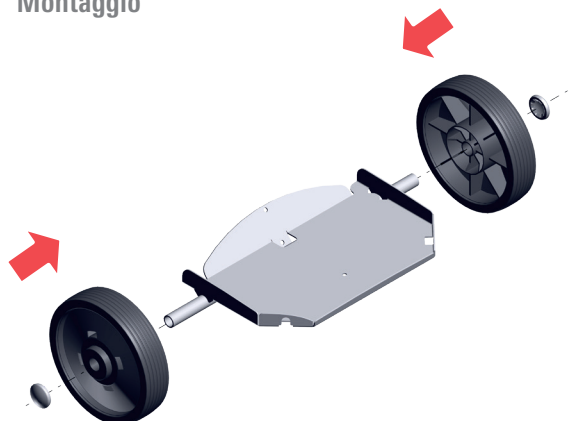


2

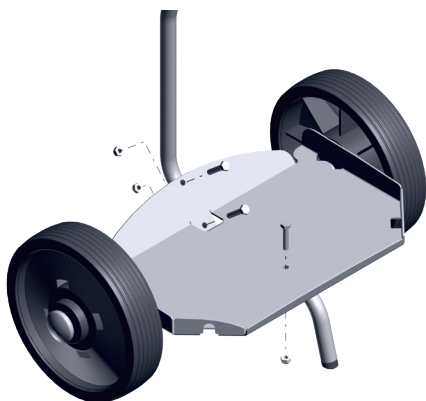

3

- ① 107 cm
- ② 112 cm
- ③ 117 cm

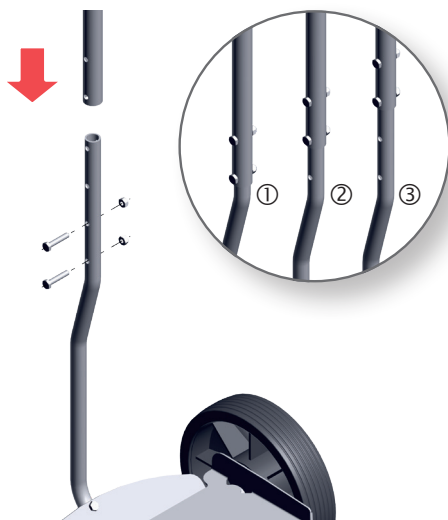

1

Befestigung
Attachment
Attachement
Attaccamento



2



3

